
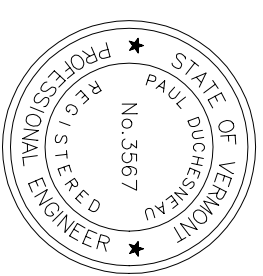


- NOTES: ABOVE GROUND APPLICATION
1. THE TOTAL COMBINED HEIGHT OF SOUND FOOTINGS™ FOOTING FORM MUST NOT EXCEED FIVE FEET (5').
  2. DRILL 3/8" HOLE AT A 45° ANGLE AT TWELVE LOCATIONS. (SEE PATTERN BELOW)
  3. DRIVE A 12" SPIKE THROUGH 3/8" HOLE AT A 45° ANGLE INWARDS.
  4. TUBES MUST BE BRACED ONCE THE COMBINED HEIGHT EXCEEDS THREE FEET (3') ABOVE GROUND.
  5. SCAB BOARDS ARE FASTENED TO THE CONSTRUCTION TUBE WITH 1-1/4" WOOD SCREWS FROM THE INSIDE OF THE TUBE.
  6. SOUND FOOTINGS™ FOOTING FORM MUST BE PLACED ON UNDISTURBED GROUND.
  7. CHECK ALIGNMENT OF CONSTRUCTION TUBE BEFORE POURING CONCRETE.

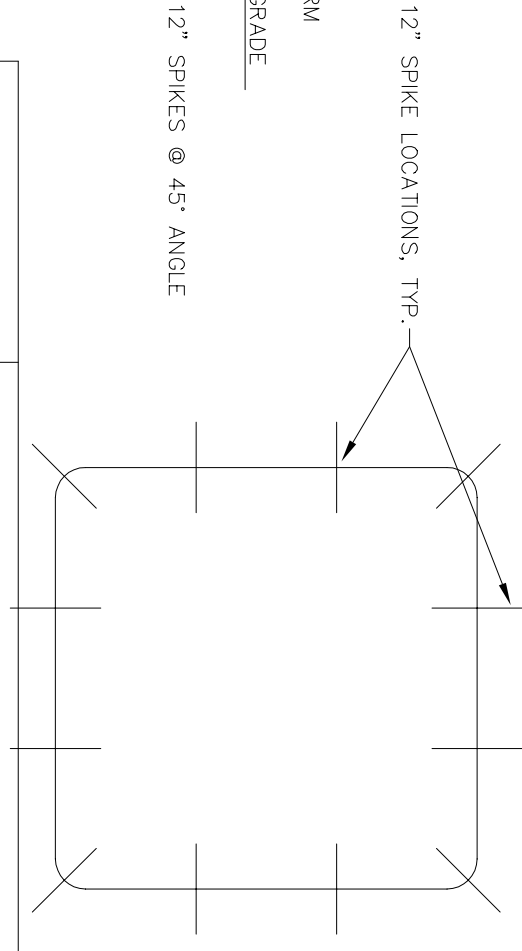

TITLE  
**SOUND FOOTINGS™ FOOTING FORM**  
 ABOVE GROUND APPLICATION

SIZE	SF-28	DWG. NO.	SF-104	REV.
SCALE	1" = 1'	DATE	2/27/02	SHEET
				4 of 9